

Dog Waste Station Assembly



PetWasteCo
Pet Waste Management

What's Needed?




All of the parts and fasteners needed to assemble your station have been included in the box, additionally; you'll need the following tools to assemble your station:

- 5/16 wrench
- Adjustable pliers
- Tape measurer
- Posthole digger
- Cement pan
- Trowel
- Concrete mix
- Water

A WASTE CAN (1)



B DISPENSER (1)

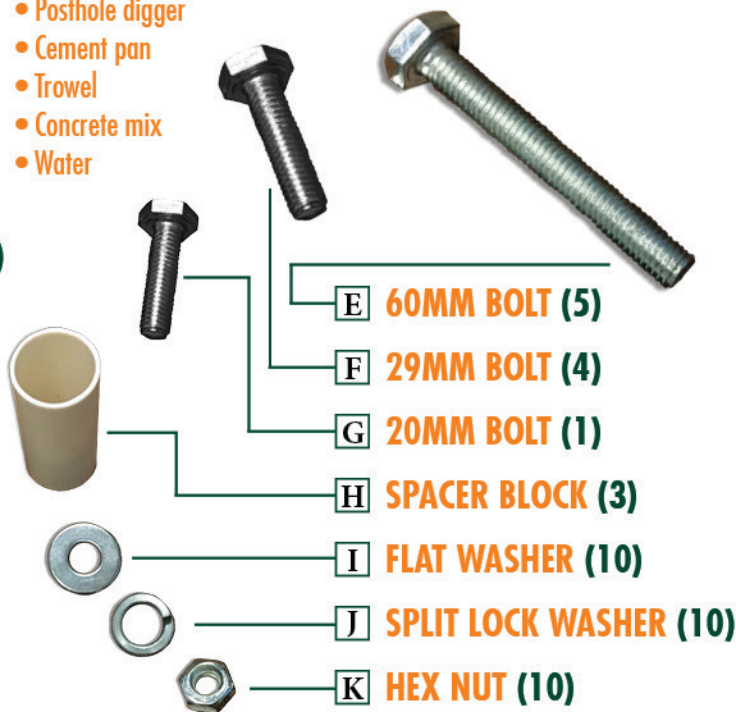

C SIGN (1)

D STEEL 8 FT U-CHANNEL POST (1) 3-Pieces (1, 2 & 3)



L KEYS (2)

Assembling the Post (3 Separate Sections)



You will need:



F x4




I x4



J x4



K x4

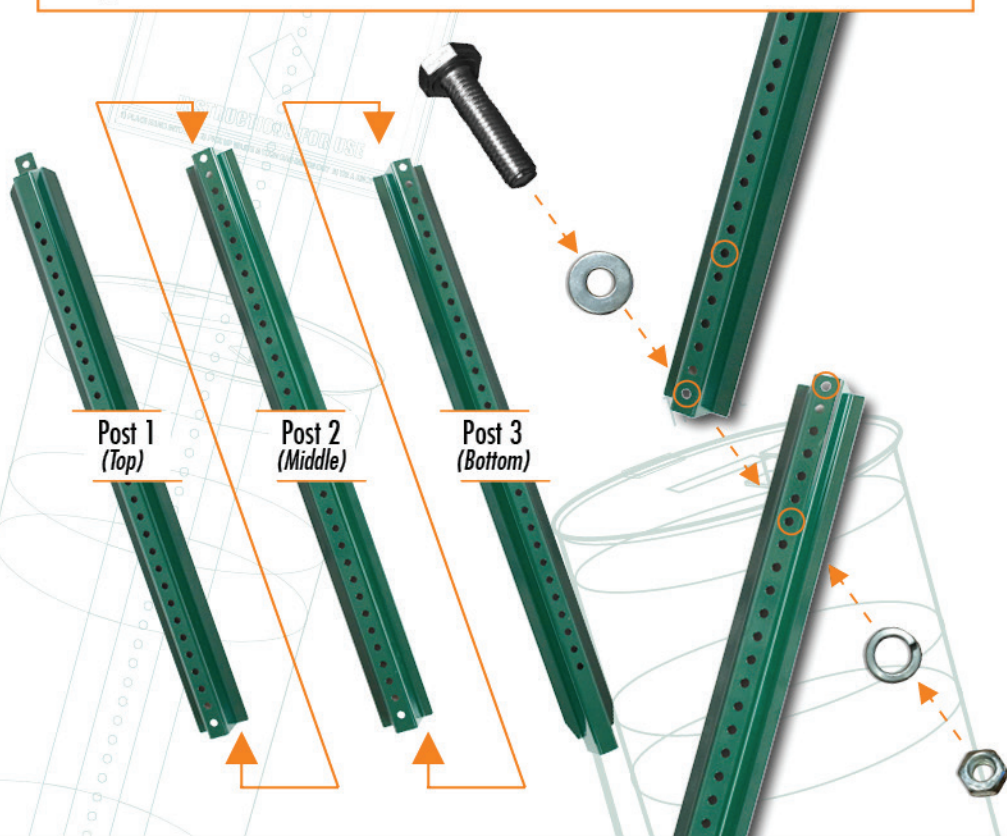

Start by overlapping the post sections by 6" (or 6 holes). Next, you'll join the two sections by inserting the two 29mm bolts (F) through the channel side of the posts. Secure the bolts in place with the provided flat washers, lock washers and nuts (I, J, K).

Attaching the Can

You will need:

E x2



I x2




J x2



K x2

800-PETS-940
www.petstools.com

12" - 14" Space

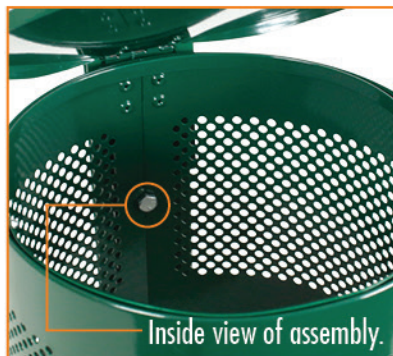


Inside view of assembly.

Start by placing the can against the post, then raise the can off the ground, allow 6" of clearance between the can and the ground to allow access under the can for landscaping equipment. Make sure the lid of the can clears the dispenser when fully opened. Place the top 60mm bolt (E) with a flat washer (I) from inside the can through the post, secure with a flat washer, lock washer and nut (I, J, K). Repeat this step for the bottom bolt.



6" Clearance Room

Attaching the Dispenser

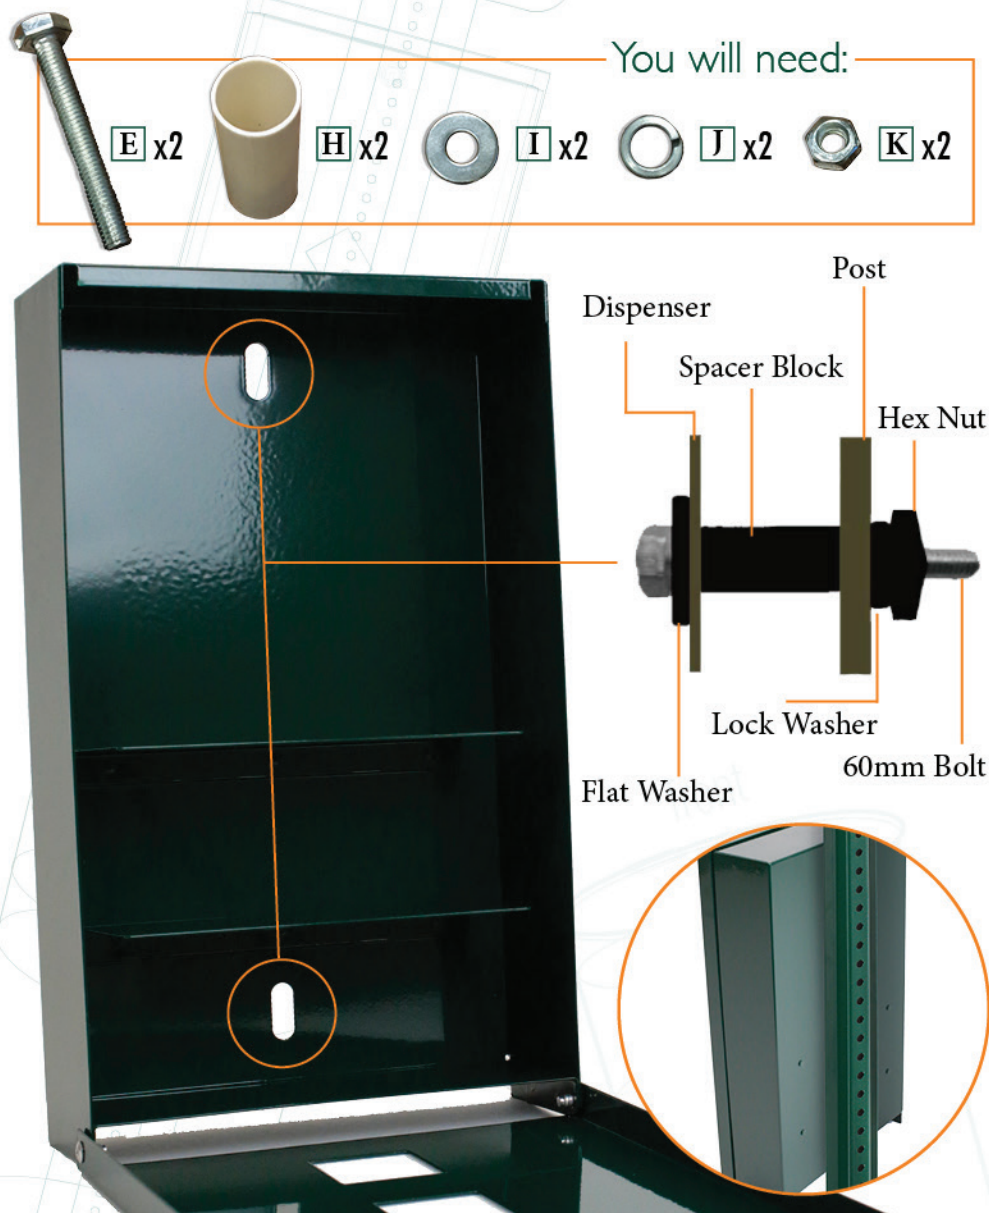

Before installing the dispenser, place a mark 2" from the bottom of the sign. Next, install a flat washer onto a bolt and place the bolt through the top hole of the dispenser, make sure the top of the dispenser is on the mark you placed below the sign and push the bolt through the dispenser, spacer block and lock in the bolt with a flat washer, lock washer and nut. Secure with wrench and repeat for the bottom hole on the dispenser.

Attaching the Sign



E x1



G x1



I x2



J x2



K x2

You will need:



20mm Bolt

Install a flat washer onto an 20mm bolt (G, I) and place the bolt through the top hole of the sign, push the bolt through the sign and lock in the bolt with a flat washer, lock washer and nut (I, J, K). Secure with wrench and repeat for the bottom hole on the sign with a 60mm bolt instead (E).



60mm Bolt

Installing Station

STATION

Dig a vertical hole with your posthole digger, measure the hole to confirm that it's 14" deep. Next you'll need to mix the concrete to secure the post. Once your concrete is mixed, place the post into the hole, letting it rest at the bottom of the 14" hole. The channel side faces forward and it's the side you will bolt the sign, dispenser and can. Add the mixed concrete and sight the post to make sure it's vertical. Make any adjustments before the concrete hardens.





PetWasteCo
Pet Waste Management

www.petwasteco.com
800.738.7940